WIRELESS FIVE-LED PUCK LIGHT

Model 94253

ONE PUCK LIGHT

Model 94254

THREE PUCK LIGHTS

ASSEMBLY AND OPERATING INSTRUCTIONS

Due to continuing improvements, actual product may differ slightly from the product described herein.

Distributed Exclusively by
HARBOR FREIGHT TOOLS®

3491 Mission Oaks Blvd., Camarillo, CA 93011
Visit our Web site at http://www.harborfreight.com

Copyright © 2006 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

For technical questions and replacement parts, please call 1-800-444-3353

Specifications

Item	Description
Battery Requirement	3 – AAA 1-1/2 volt batteries per Puck Light (not included)
Run Time	Up to 60 hours using new, high quality batteries
LEDs	Bright white
Switch Type	Push button in lens: On/Off/Dim
Lens Head	Swivels 360 degrees; pivots 30 degrees left/right
Mounting	Screw or hook-loop tape mount
Weight	0.5 lbs. (each puck)

Save This Manual

You will need the manual for the safety warnings and precautions, assembly instructions, operating and maintenance procedures, parts list and diagram. Keep your invoice with this manual. Write the invoice number on the inside of the front cover. Keep the manual and invoice in a safe and dry place for future reference.

Safety Warnings and Precautions

WARNING: When using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

Read all instructions before using this tool!

1. The Puck Light does not provide enough light to illuminate a pathway for walking.
2. Use only the size and battery type specified. Do not mix different types of batteries together (alkaline and NiCad).
3. Use care when installing batteries. Placing the batteries in the wrong direction (polarities reversed) may damage the Puck Light.
4. When batteries are used up, recycle them properly. Do not throw into the trash or burn them.

Note: Performance of this product may vary depending on variations in battery power.

Warning: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Unpacking

When unpacking, check to make sure that the product is complete and undamaged. If any parts are missing or broken, please call Harbor Freight Tools at the number on the cover of this manual.

Installation

Mounting with Hook and Loop Tape

1. Find the Hook and Loop tape (supplied). They come attached to each other. Pull apart the Hook and Loop sections.
2. Peel the backing off the Hook pad. Center on the Battery Cover and press down to adhere.
3. Clean the spot where the Light is to be located of any dirt and grease. Peel the backing of the Loop pad and press down and adhere Light to the location.

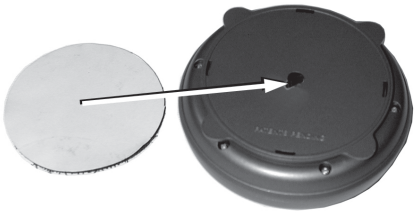

4. After the Batteries (not included) are installed, press the Puck Light against the Loop pad to secure.

Mounting with Screw

1. Remove the Back Cover by carefully pulling up on Tabs. Remove the bag of Screws (included) located inside the Puck Light.
2. Locate the mounting location and make a pencil mark at the center point.
3. If mounting to a wall, use appropriate screw lugs (not included) for the screws provided. If mounting onto other material, drilling may be required.

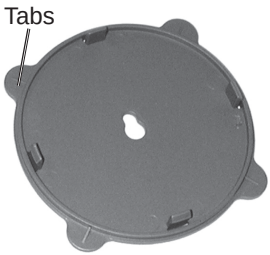

Caution: Avoid electrical shock. Be certain that you are not drilling or screwing into any electrical wires located behind the wall.

4. Screw in mounting Screw, leaving a 1/16 inch space under the screw head.
5. Place the Screw into the center hole of the Back Cover, slide the Back Cover to the smaller portion of the hole, and tighten Screw completely.
6. After the Batteries (not included) are installed, press the Puck Light onto the Back Cover to secure. It should snap into place.

Installing Batteries

1. Remove the Back Cover by carefully pulling up on the Tabs.
2. Install three, new AAA 1-1/2 volt batteries into each Puck Light. Align the + polarity on the Battery with the + on the battery holder.
3. Snap in the Back Cover.

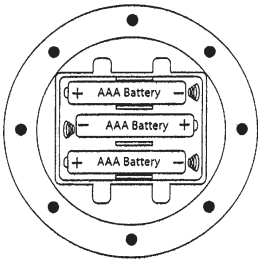

Operation

1. Position the Puck Light by pressing on the left or right side of the Lens to direct the light left or right 30 degrees.
2. Turn the Puck Light base 360 degrees to direct the light.
3. Press in on the center of the Lens once to turn the light on at full brightness.
4. Press again for lower brightness.
5. Press a third time to turn the light off.

Troubleshooting

Symptom	Probable Cause	Possible Solution
No light when Lens pushed in.	1. Batteries weak or dead. 2. Installed batteries incorrectly.	1. Replace batteries. 2. Reinstall batteries paying attention to polarity (+/-).
One LED does not light	LED burned out.	Replace Puck Light or have a qualified technician repair the unit.

Maintenance

1. Remove the batteries before storing the Puck Light.
2. Immediately remove the batteries when the batteries have run down.
3. Store the Puck Light in a clean and dry location when not in use.
4. There are no customer replaceable parts on this unit.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THat ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.